set up guide

Configuring the Dynalink Android TV
Streaming Device for use with Socket TV





UNBOXING THE CONTENTS

- -Checking box contents
- -Place Batteries in Remote
- -Plugging in HDMI and Power Supply



Unbox and check the contents






- 1. DynalinkTV Streaming Device
- 2. Remote Control (batteries included)
- 3. HDMI cable
- 4. AC Adapter with cable

Open back or remote, install batteries and replace cover



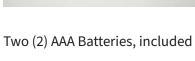



Plug the HDMI and AC Adapter into the DynalinkTV device







AC Adaptor (power supply)

Connect the power supply to an outlet



Connect the DynalinkTV device to your TV





Place the HDMI cable fom the Dynalink TV device into an open HDMI port on the back of your TV.

DEVICE / TV SET UP


Tune your TV to the input to which you connected the DynalinkTV Device

- -Pair Remote Control
- -Device Setup, Sign In with a Google Account using Android Phone or TV



Follow the onscreen instuctions to pair the remote control




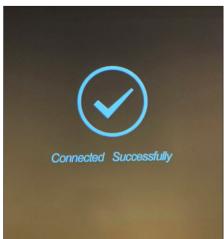

On the remote, press and hold the "**Volume Down (-)**" and "**Select/Ok**" buttons together for about 6 seconds until you see the remote's LED blinking.




Select a language

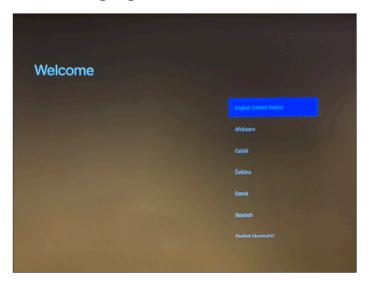

Use the outer circle on the remote to move your selection up, down, left, right, and the center circle button on the remote when you want to make a selection on the screen.



Set up your TV

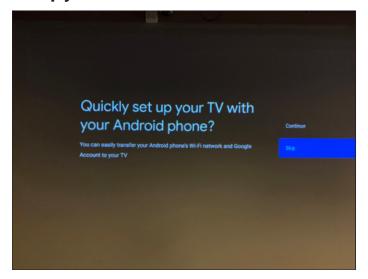


If you wish to use an Android phone to complete the set up, choose Continue and skip to Step A1.


To continue on on-screen, choose **Continue**.




Select your home WiFi Network from the list

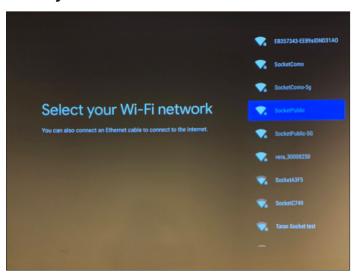


Enter the password using the on screen keyboard

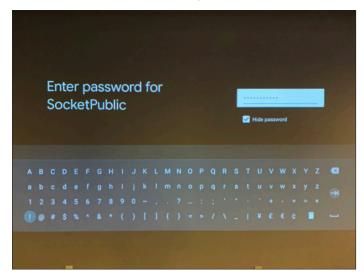

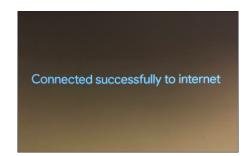




Automatic Software Download, if applicable

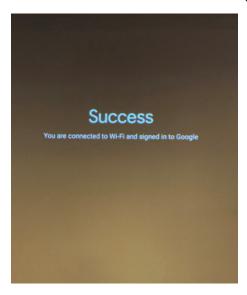

The DynalinkTV device may download updated software. Please be patient as this step could take a few minutes.


Device Reboot and Install

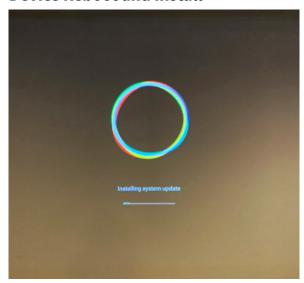


The device will reboot and install the updates.



Sign in with your Gmail Account (Google Email)

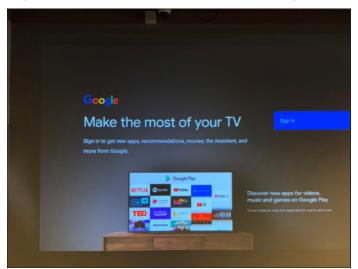


Enter your Google Email name

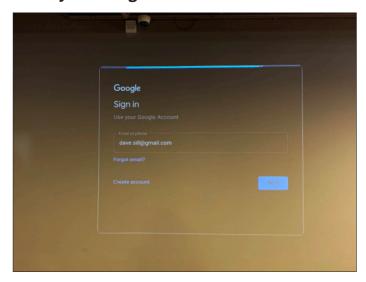

Choose the Gmail (Google Email) account you wish to use. If you don't have an existing Google Account, you'll need to choose Create Account to make one to be able to use Socket TV.

Enter your Gmail password

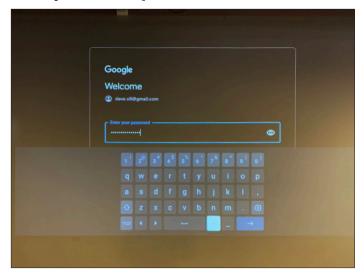

13


Complete the 2-Step Verification, as directed



Complete the 2-Step Verification to confirm your identity on your Gmail account.


14

Accept the Terms of Service

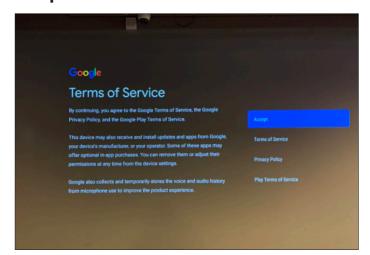

15

Ready to Install the Socket TV App

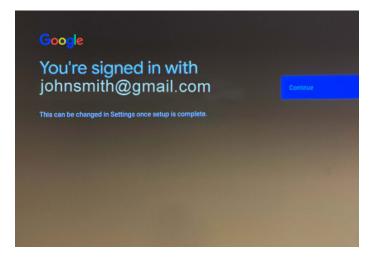

Skip to Step 16 to continue TV Set Up.



Set up your TV with your Andriod Phone



If you want to use an Android phone to complete set up, choose Continue.



Follow the on-screen instructions to use your Android Phone for the next steps




1. On your Android phone, open the pre-installed app "Google"



Then on your phone, click Next.

2. Type or say "Ok Google, set up my device"

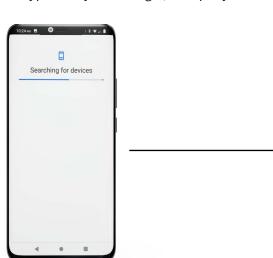




3. Tap the device number on the list.





Sync your phone to your DynalinkTV Device

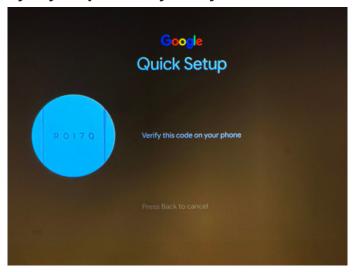



The TV screen will ask to verify a code on your phone screen. If they match, tap **Next** on the phone.



Choose the wireless internet connection to connect your device to.



Then on your phone, click Next.



Choose the Gmail (Google email) account you wish to use. If you don't have an existing Google Account, you'll need to create one to use Socket TV.




You can close the Google app on your phone and continue set up on on your TV screen.






Automatic Software Download, if applicable

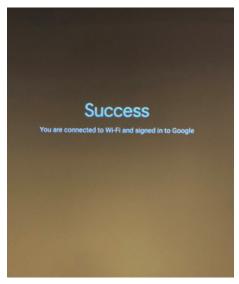

The DynalinkTV device may download updated software. Please be patient as this step could take a few minutes.

Device Reboot and Install

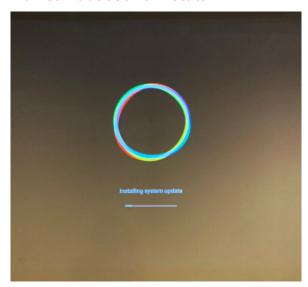


The device will reboot and install the updates. Continue with Step 16.


FINISH GOOGLE SETUP

- -Terms of Service Agreement
- -Google Voice Assistant Options
- Review Device Features
- Configure Remote



Google Set Up

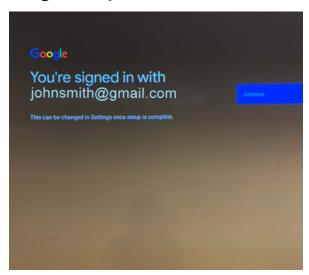


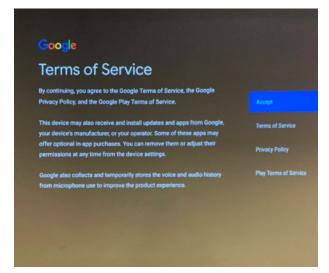

Continue with the Google account selected earlier, and agree to the terms of service (If you wish to switch to another Google account, you can do so later in Settings once setup is complete).




Google Voice Assistant Options

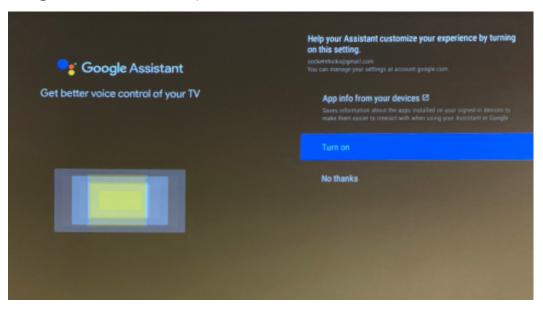



Choose whether or not to use the Google Assistant voice control and the following options associated with using it (*This is not necessary to use Socket TV*).

Google Voice Assistant Options, continued

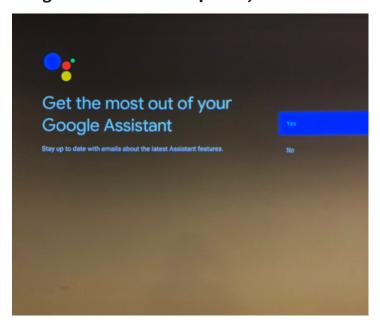

Choose to stay updated with emails about Google Assistant features.

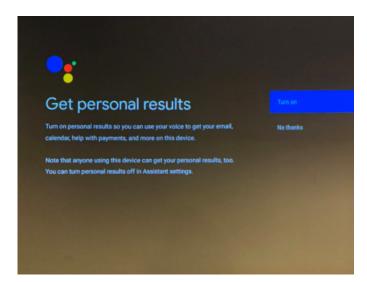

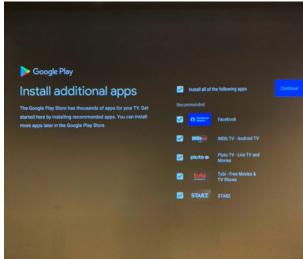



You can also choose to set up personal results and install additional apps on your TV(*These are not necessary to use Socket TV*).

18

Review Features of the Device



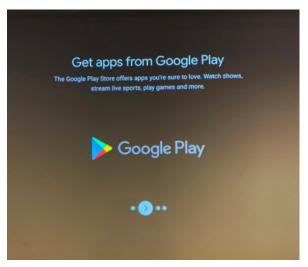

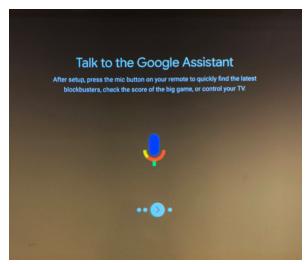





Using the remote, you can scroll through to read about some device features.




Configure Remote Control

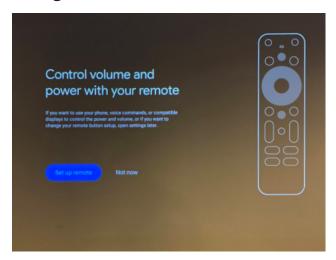


Choose **Set Up Remote** and follow the onscreen instructions to configure the remote control.

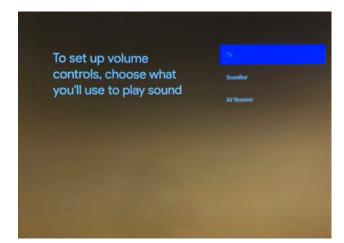

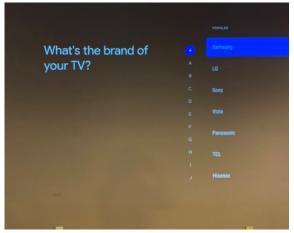


Select how you want to play sound on your TV and choose the brand.

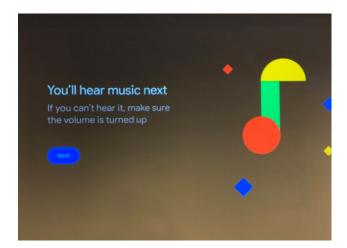



You will test the sound that comes out of the TV and use the remote to turn it up and down.

Configure Remote Control, continued

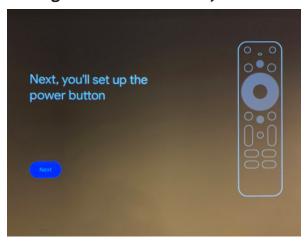



Follow the onscreen instructions to set up the power button.



Remote configuration is complete. Choose Next.


Setting Up Socket TV

Start watching TV

- -Download Socket App
- -Sign Into Your Socket Account




You should now see the home page for your DynalinkTV device.

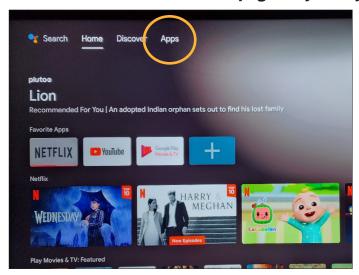

Using the remote, select Apps.

21


Get More Apps

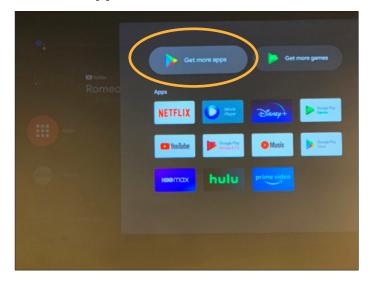

Open the **Google Play store** to search for the SocketTV app.




Type "Socket TV" in the search bar

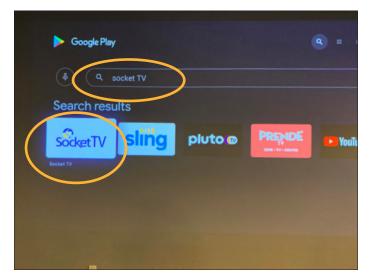

Select the search bar and type in "Socket TV". The SocketTV app thumnail should show up. Select it.

Install SocketTV app to your device

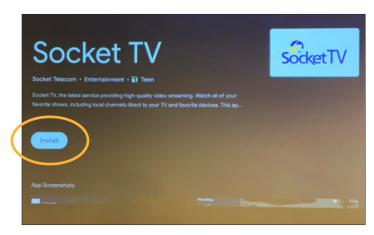

Select Install to download and install the app.



Open the SocketTV app



Select **Open** to start the app.



Sign In to the SocketTV app



Type in your SocketTV subscriber username and password, located on your Quick Start Guide, and give a nickname for your device's location.



Select **Submit.** If you forgot your username or password, call us at 1-800-SOCKET-3

You are now ready to watch SocketTV!